

**PYLE**<sup>®</sup>  
PyleUSA.com

**Portable Bluetooth Wireless BoomBox Stereo System,  
Built-in Rechargeable Battery, MP3/USB/FM Radio**

*USER MANUAL*



**PBMSPG6**

# Pyle BT Portable Speaker

## PBMSPG6 USER GUIDE

For correctly operating, please read this manual carefully before using. Any content revise of the manual won't declare again, and we are no responsible for consequence caused by fault or oversight of this manual




### FEATURES:

- 1.0 Outdoor Passive HIFI Bluetooth Speaker:
  - Output very clear sound and dynamic sound effect;
  - With A2DP Bluetooth, wireless stream music from any Bluetooth-enabled device such as your mobile phone, notebook, iPhone or iPad;
  - Secure simple pairing for user-friendly operating;
  - 10 meters operating range;
  - With Line-in function, suitable for PC, MID, TV and other audio device;
  - Built-in lithium rechargeable battery 1500mAh;
  - With lanyard, easy to take outside.
- Digital Sound Amplifier
- FM Radio with Auto-Tuning
- USB Flash Drive Reader
- MP3 Digital Audio File Compatibility
- Aux (3.5mm) Input Jack
- Side Panel Button Control Center
- Full Range Stereo Sound Reproduction
- Ported Enclosure Design for Impressive Bass Response

### What's in the Box:

- Wireless Tube Speaker
- USB Charging Cable
- Audio Connection Cable
- Detachable Carry Strap

## INSTRUNCTION FOR APPEARANCE AND KEY:

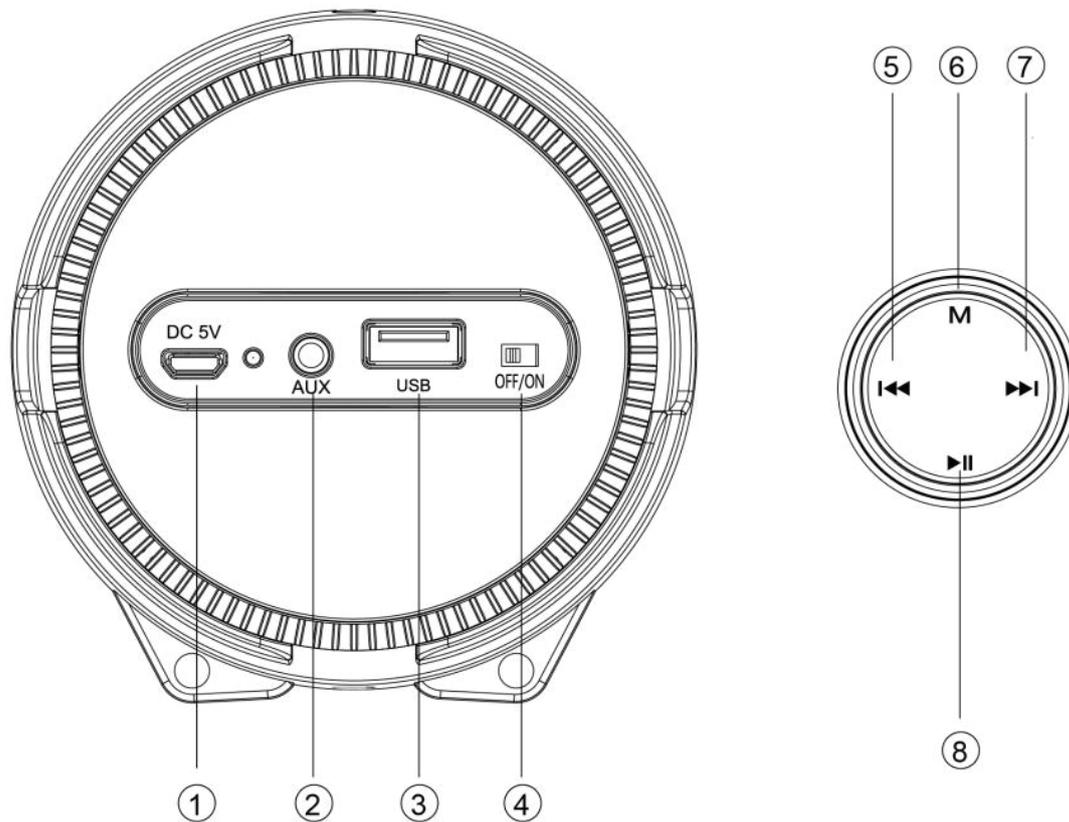

1. Charging jack
2. Aux-in jack
3. USB port
4. ON/OFF button
5. Backward/Volume down
6. Mode (Switch Bluetooth, USB disk, TF, FM and AUX-IN state)
7. Forward/Volume up
8. Play/Pause

### **Bluetooth connection:**

1. Turn the power button to “ON”, The LED light turn blue and twinkle quickly and beep twice
2. Activate *Bluetooth* of mobile phone and search for device name “BT speaker” then connect it. The blue LED light will blink slowly and beep three times once connected successfully.
3. Play the music from your mobile phone and enjoy.
4. Press Forward or Backward button on the devices or on Mobile phones to select songs you like.
5. Press Play/pause button on the devices or on Mobile phones to play/stop the music
6. Use the Bluetooth device to adjust volume up and down. Or long press to Forward or Backward button to adjust volume up and down.

### **Playing music from USB disk:**

1. Turn the Power button to “ON”.
2. Insert USB flash disk into slot, the music stored will be played automatically and blue LED light always keep lighting.
3. Under playing mode, short press forward or Backward button to select songs you like, or long press to Forward or Backward button to adjust volume up and down.
4. PLAY/PAUSE to play or pause.
5. Please turn the Power button to “OFF” while without use.

Remark: Under Bluetooth playing mode, insert USB disk will disconnect the Bluetooth and switch the playing from USB disk. You can press the MODE button to switch to Bluetooth mode again.

### **How to Use FM Radio:**

1. Under FM radio state, the audio cable provided treat as antennal. Please insert the audio cable to get the best FM signal before using.
2. Turn the power button to “ON”, press the “MODE” button to switch to FM radio state.
3. Under playing mode, short press “Play/pause” button to auto search the FM Channel and store it automatically.
4. Press Forward or Backward button to change the stored FM channel.

## AUX-IN:

For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this devices. Then press the "MODE" button to switch to AUX-IN state.

Enjoy...

When using an external device, all functions will be controlled by the external devise except the "Play/pause" button.

## Battery Charging:

1. Power off the unit, put the provided charge cable into the charge slot of unit, connect the other end to PC or other charger with 5V output, the red charging indicator keep lighting.
2. Charge time should be 3-5 hours. When charging full, the indicator light will switch off.
3. In order to prolong the life of battery, please do not charge more than 8 hours.

## Note:

1. The unit will operate without the wire connection using the lithium battery. The amount of battery life depends on how hard the unit is working. Heavy, loud, bass music will use more energy to produce than spoken word.
2. The built-in rechargeable battery is not replaceable. Do not remove or replace it, do not throw in the trash or in the fire.
3. When cleaning the product, use a soft dry cloth. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.



### VISIT US ONLINE:

*Have a question?*

*Need service or repair?*

*Want to leave a comment?*

[PyleUSA.com/ContactUs](http://PyleUSA.com/ContactUs)

# PYLE