

Additional Linking Instructions

When adding extra receivers, follow the troubleshooting guide line-by-line. You must use the included 3.5 mm cable. Do not connect power to the transmitter or receiver until all other cables are attached. You must press reset on the transmitter and receiver exactly at the same time when instructed. If any of the four receivers stop receiving, power cycle it. Allow two to three minutes after pairing or power cycling for the picture to appear.